



# HOT WATER HEAT PUMPS LTD

Advancing Water Heat Pump Technology

SINCE 1980

## E45 Series Controllers



Consultancy • Installation • After Sale Service • Nationwide Authorised Dealer Network

**PERFORMANCE PLUS** **VENT-AIR** **duoheat** **THERMO PLUS** **DSS THERMOHEAT** **Econergy** **MONOLITH**

P: (09) 838 9444 - 0800 33 66 33 F: (09) 838 6223 W: [www.waterheating.co.nz](http://www.waterheating.co.nz)  
3 Corban Ave, Henderson, Auckland 0612 PO Box 21-586, Henderson, Auckland 0650




# E45 Series Controllers

Page	Controller	Description	Temperature	De-Ice	HP / LP	Time Clock
4 - 7	E45-1	Heat OR Chill				

## Technical Index

- Temperature display range:  
-50 - 150°C (The resolution is 0.1°C)  
-58 - 302°F (The resolution is 0.1°F)
- Power supply: AC 220±10%  
(Refer to the wiring diagram)
- Operating environment:  
temperature -30°C - 80°C, humidity≤85%
- Relay contact capability: 8A/250VAC  
(pure resistive load)
- Temperature sensor: NTC R25=5kΩ,  
B(25/50)=3470K

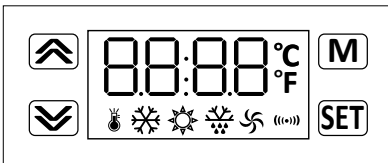

Indicator Light	Lit Function	Flashing Function
	Changing current water temperature	N / A
	Chilling Mode	Waiting on time delay
	Heating Mode	Waiting on time delay
	Defrost Mode	Waiting on time delay
	N / A	N / A
	N / A	Alarm

If Set, default password = 0077

### Change Set Point Temperature:

Press and hold [SET] for 3 seconds, display will change from reading current water temperature to reading the current set point.

Press and release the up or down arrow buttons to alter temperature or press and hold to change rapidly.

Press [SET] to confirm the new value and resume normal operation.

### Check current defrost sensor temperature: (De-ice capable models only)

Press and hold the Down arrow, this will display what the sensor is currently reading.

Release the Down arrow to return to normal display.

### Turn unit ON / OFF:

Press and hold the "⏏" button for 3 seconds, when the temperature is being displayed to turn the unit OFF

When the unit is OFF press and hold the "⏏" button for 3 seconds, to turn the unit ON.

### Entering advanced menu:

Press and hold the [M] button for 5 seconds

Navigate the F numbers using the Up and Down arrows

Use [SET] to enter into the options for the F number you wish to alter.

Change the value with the Up and Down arrows

Press [SET] to confirm the new value or press [M] to cancel the change and return to the F menu.

# Model E45-1

## Detailed Parameters

F11: Temperature at which the heat pump will stop at and has a range which is dictated by the values in F14 and F13.

F12: (Differential) Number of degrees +/- from set point (F11) before the heat pump will start.

F13: Maximum water temperature that can be set in F11 parameter.

F14: Minimum water temperature that can be set in F11 parameter.

F18: (Defrost Sensor Calibration) Adjusts the offset reading for the defrost sensor probe in situations of reading higher or lower than actual temperature (or consult HWHP about relocating sensor).

F19: (Water Sensor Calibration) Adjusts the offset reading for the water sensor probe in situations of reading higher or lower than actual temperature.

F21: (Compressor Time Delay) Minimum time to start after heating signal has been called for.

F29: Set the controller mode between heating or cooling

F30: Minimum number of minutes between defrost cycles.


F31: Temperature at which the Defrost Cycle will trigger.

F32: Temperature at which the Defrost Cycle will terminate.

F33: Time delay in minutes at which the Defrost Cycle will initiate once triggered by F31 setting.

F34: Maximum number of minutes the Defrost Cycle will run for.

F37: Defrost Modes

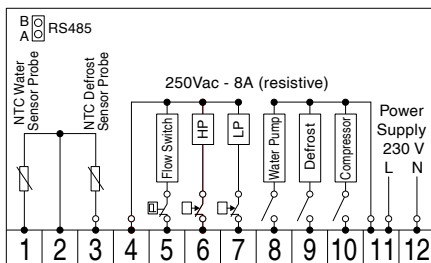

F37				
Value	Description	Running State	Comp Output	Defrost Output
0	RV is off - heating	Heat	Yes	No
	RV is on - defrosting	Defrost	Yes	Yes
1	RV is on - heating	Heat	Yes	Yes
	RV is off - defrosting	Defrost	Yes	No
2	Bypass Valve defrost	Heat	Yes	No
		Defrost	Yes	Yes
3	Electric heat defrost	Heat	Yes	No
		Defrost	No	Yes
5	Passive defrost 1	Heat	Yes	Yes
		Defrost	No	No
6	Passive defrost 2	Heat	Yes	No
		Defrost	No	No

RV=Reversing Valve

F51: Flow Switch mode options (note: Flow switch will allow comp delay count down if made without break within 1 minute of pump starting, and calling for heating or cooling).

Value	State	Alarm code [FL]	F51
0	Disabled	No flow control and no Alarm	
3	Enabled	Display [FL] on contact break, resume normal display when contact is made	
5	Enabled	Display goes blank when contact breaks, resumes temperature display when contact is made	

F52: Standard High Pressure Safety Switch

Value	State	Alarm code [HP]	F52
0	Disabled	No high pressure control and no Alarm (HP not used).	
3	Enabled	Display [HP] on contact break, resume normal display when contact is made (auto reset).	
4	Enabled	Display [HP] on contact break, does not auto resume when contact is made. User interaction required, press [SET] key to resume (manual reset).	

F53: Low Pressure Safety Switch

Value	State	Alarm code [LP]	F53
0	Disabled	No Low Pressure control and no Alarm (LP not used)	
3	Enabled	Display [LP] on contact break, resume normal display when contact is made (auto reset)	

F54: Advanced High Pressure Safety Switch

Value	State	Alarm code [HP]	F54
No	Disabled	Follow F52 Standard High Pressure Safety Switch	
Yes	Enabled	Display [HP] on contact break. If contact breaks for less than 3 times within 60 minutes, resume normal display when contact is made (auto reset). If contact breaks for 3 times within 60 minutes, it does not auto resume when contact is made. User interaction is required. Press [SET] key to resume (manual reset).	

F80: Password prevents alteration of the configuration menu by pressing [M].

To enter a password use the down arrow button 0000 will be displayed, press set and the first 0 will flash, up and down arrow to alter this value between 0 and 9, press set and the second 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the third 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the fourth 0 will begin flashing, up and down arrow to alter this value between 0 and 9, press set and the display will go back to the menu displaying F86. The password is now set and will be required to alter the set point temperature or enter the menu system.

Value	State	Description	F80
OFF	Disabled	No password lock out (Factory setting).	

F81: Temperature units of measure

Value	Description	F81
C	Temperatures are displayed in Degrees Celsius (Factory setting).	
F	Temperatures are displayed in Degrees Fahrenheit	

F84: Number of times the compressor has started.

F85: Displays number of hour's compressor has run.

F86: Default value is No, Yes to reset F85.

F87: Number of hours the compressor will run for before it is stopped, this needs to be reset for the heat pump to run again.

**Alarm Codes:**

Code	Cause
A21	SHr means water temperature sensor short OPE means water sensor connection is open
A22	SHr means defrost temperature sensor short OPE means defrost sensor connection is open
FL	No water flow or flow switch failure F51 (Mode 3 only)
HP	High Pressure Safety Switch triggered
LP	Low Pressure Safety Switch triggered
A99	Compressor run time expired

**Advanced Menu:**

		<b>E45-1</b>	<b>Factory defaults</b>	
<b>Code</b>	<b>Parameter Name</b>	<b>Range</b>	<b>Pool</b>	<b>Underfloor</b>
F11	Temperature Set Point	F14 to F13 (°C)	28	35
F12	Temperature Differential	0.1 to 20.0 (°C)	0.5	2.0 to 5.0
F13	Maximum Temperature Setting	20.0 to 150.0 (°C)	40	45
F14	Minimum Temperature Setting	-50.0 to 20.0 (°C)	10	10
F18	Defrost Temperature Offset	-20.0 to 20.0 (°C)		0
F19	Water Temperature Offset	-20.0 to 20.0 (°C)		0
F21	Compressor Time Delay	0 to 10 (minutes)		5
F29	Controller Mode	Heat or Cool		Heat
F30	Defrost Cycle	Off / 1 to 999		15
F31	Defrost Start Temperature	-20.0 to 20.0 (°C)		-5
F32	Defrost End Temperature	0.0 to 100.0 (°C)		15
F33	Defrost Start Time	1 to 99 (minutes)		0
F34	Maximum Defrost Duration	Off / 1 to 99 (minutes)		10
F37	Defrost mode	0, 1, 2, 3, 5, 6		1
F51	Flow switch control mode	0, 3, 5		5
F52	High Pressure control mode	0, 3, 4		3
F53	Low Pressure control mode	0, 3		3
F54	Advanced High Pressure Control mode	Yes/No		No
F71	Controller Address	1 - 247		1
F72	Baudrate	300 - 9600bps		9600
F73	Data Bit	5 - 8		8
F74	Strap Bit	1 - 2		1
F75	Check Bit	None / Odd / Even		N
F80	Password	Off / 1 to 9999		Off
F81	Temperature Unit	C or F		C
F84	Compressor Start Counter	0 to 9999 displayed		-
F85	Compressor Hour Counter	0 to 9999 displayed		-
F86	Compressor Hour Counter Reset	No, Yes = reset		-
F87	Limited Compressor running time	0 to 9999 hours		-

**Modbus Table:**

Address	Range	Read/Write	Unit	Parameters	Notes
00001	-	Read + Write	-	Compressor	These three signals are controlled by internal logic, normally is unable to write and change the signal.
00002	-	Read + Write	-	De-ice	
00003	-	Read + Write	-	Water Pump	
10001	-	Read Only	-	Reserved	
10002	-	Read Only	-	Reserved	
10003	-	Read Only	-	Flow Switch	
10004	-	Read Only	-	HP	
10005	-	Read Only	-	LP	
30001	-580 - 3020	Read Only	0.1 °C / °F	Water Temperature	
30002	-580 - 3020	Read Only	0.1 °C / °F	Evaporating Temperature	
30003	-580 - 3020	Read Only	0.1 °C / °F	Reserved	
40011 -- 40089				F11 – F89	Please refer to E45 Menu on page 6.
41001	0 – 9999	Read Only	-	Model	
41002	0 – 9999	Read Only	-	Software version	
41101	0-1	Read / Write	-	Unit On/Off	0: OFF 1: ON
41102	0 - 5	Read Only	-	Controller Mode	0: Power Off 1: Standby 2: Chilling 3: Heating 4: De-icing 5: Alarm
41120		Write Only	-	Alarm Reset	Write any integer to reset
41121	0 - 1	Read Only		Water Temp Probe Alarm	0: No alarm 1: Alarm
41122	0 - 1	Read Only		Evaporating Temp Probe Alarm	
41123	0 - 1	Read Only		Flow Switch Alarm	
41124	0 - 1	Read Only		HP Alarm	
41125	0 - 1	Read Only		LP Alarm	
41126	0 - 1	Read Only		End of Usage period Alarm	
41201	0 - 99	Read + Write	Year	Time clock	
41202	1 - 12	Read + Write	Month		
41203	1 - 31	Read + Write	Day		
41204	0 - 23	Read + Write	Hour		
41205	0 - 59	Read + Write	Minute		
41206	0 - 59	Read + Write	Second		
41208	-	Read + Write	-	BCD format Hour and Minute	(Eg: 0x1200 equals 12:00)

For further information please phone Hot Water Heat Pumps Ltd



Consultancy • Installation • After Sale Service • Nationwide Authorised Dealer Network

**P:** (09) 838 9444 - 0800 33 66 33 **F:** (09) 838 6223 **W:** [www.waterheating.co.nz](http://www.waterheating.co.nz)  
3 Corban Ave, Henderson, Auckland 0612 PO Box 21-586, Henderson, Auckland 0650